

Vogue Parts Drawing | Quick Guide

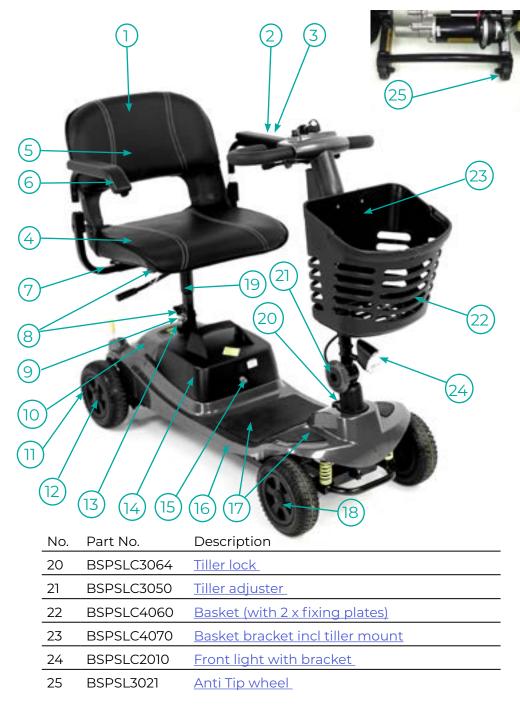


No.	Part No.	Description
1	BSPSL4001	Seat complete (w/o mechanism/arms)
2	BSPSL4020L BSPSL4020R	Seat arm pad - left (N/S) Seat arm pad - right (O/S)
3	BSPSL4021	Seat arm complete with pad - left (N/S)
4	BSPSL4010	Seat base cover
5	BSPSL4011	Seat back cover
6	BSPSL4022	Seat arm complete with pad - right (O/S)
7	BSPSL4030	Seat Mechanism
8	BSPSLC4051	Seat post/arm rest retaining screw M8
9	BSPSLC4050	Seat post pin
10	BSPL1101	Rear shroud - Capri Blue
10	BSPL1103	Rear shroud - Brilliant Green
10	BSPL1105	Rear shroud - Candy Pink
10	BSPL1106	Rear shroud - Midnight Purple
10	BSPL1108	Rear shroud - Venetian Red
10	BSPL1109	Rear shroud - Oyster Grey
11	BSPL3002	Rear wheel (black) with solid tyre
12	BSPSLC3020	Hub cap (black) for solid tyre
13	BSPL3040	Splitter knob with pin
14	BSPL2050	Battery Box complete without batteries
15	BSPSLC2015	Charger socket for battery box
16	BSPL1001	Front Shroud - Capri Blue (without mats)
16	BSPL1003	Front Shroud - Brilliant Green (w/o mats)
16	BSPL1005	Front Shroud - Candy Pink (without mats)
16	BSPL1006	Front Shroud - Midnight purple (w/o mats)
16	BSPL1008	Front Shroud - Venetian Red (without mats)
16	BSPL1009	Front Shroud - Oyster Grey (without mats)
17	BSPL1300	Mat set (3 x mats)
18	BSPL3001	Front wheel (black) with solid tyre
19	BSPL4040	Seat Post

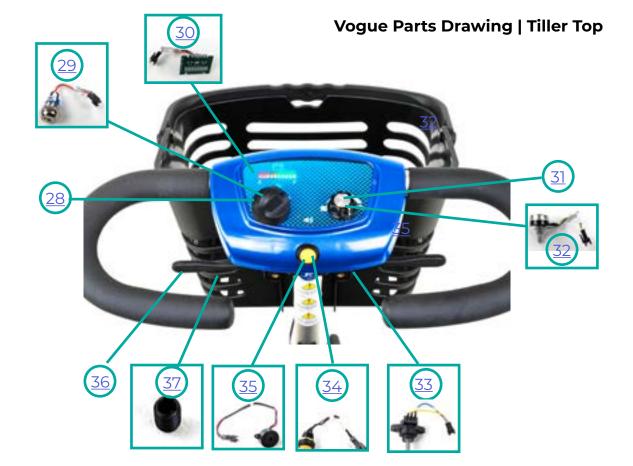

No.	Part Code	Description (CLICK TO TAKE TO PRODUCT PAGE)
28 <u>.</u>	BSPSLC2001	Key (Pair)
29 <u>.</u>	BSPSLC2002L	<u>Ignition Barrell with loom</u>
30.	BSPSLC2005L	Battery Gauge with loom
3 <u>1.</u>	BSPSLC2007	Speed Pot Knob - only
3 <u>2.</u>	BSPSLC2006L	Speed Potentiometer with loom
33.	BSPSLC2008L_	Throttle Potentiometer with loom
34.	BSPSLC2003L	Horn Button with loom
35.	BSPSLC2004L	Horn Unit Buzzer with loom
36.	BSPSLC2009	Wig Wag Lever
37.	BSP2001	Grub Screw for Wig Wag lever


Vogue Parts Drawing: Motor,Brake,Transaxle

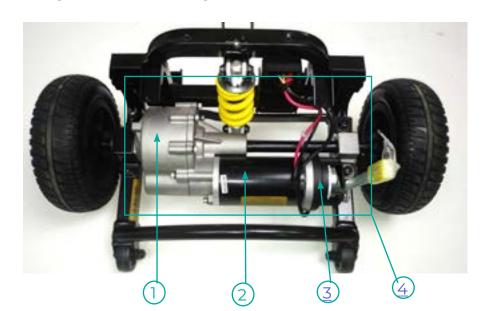


No.	Part No.	Description
1	BSPSL2080	<u>Transaxle</u>
2	BSPSL2060	Motor
3	BSPI2071	Electronic Brake with white plug connector
4	BSPSL2081	Motor, Brake, Transaxle Complete

Vogue: Electrical connectors & Front Chassis

Chassis Mounted Battery box connetions

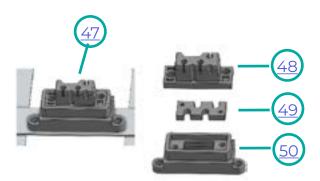

Battery Box Battery box connetions

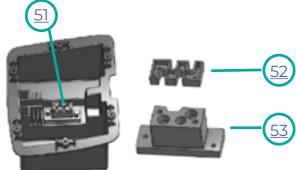


51	<u>52</u>

Splitter Connector Front End



Splitter Connector Rear End

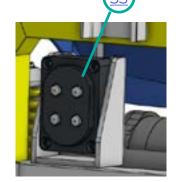

No.	Part Code	Description (CLICK TO TAKE TO PRODUCT PAGE)
<u>47.</u>	BSPSLC2013	Complete Chassis connection block with loom - DYNAMIC controller
<u>47.</u>	BSPSLC2013S	Complete Chassis connection block with loom - S DRIVE controller
<u>48.</u>	BSPSLC2018	3 Point Connector Block only - on chassis
<u>49.</u>	BSPSLC2022	Retaining Clip for chassis mounted block
<u>50.</u>	BSPSLC2019	Base for 3 point connector chassis block
<u>51.</u>	BSPSLC2014	Complete Battery pack mounted connection block - with loom
<u>52.</u>	BSPSLC2021	Retainting Clip for battery pack block
<u>53.</u>	BSPSLC2023	Complete Battery pack mounted connection block - no loom
<u>54.</u>	BSPSLC2012	Splitter Connector (front section)
<u>55.</u>	BSPSLC2011	Splitter Connector (rear section)
<u>56</u>	401103	2amp Charger for AGM battery
57	Controller	Controller - Check battery type and Controller type





